

Titanium Assistant




Titanium Assistant

The companion application to the Neo Titanium software.


Titanium™ Assistant is a standalone software application that allows operators to preview build files, schedule planning and prepare builds on multiple Stratasys Neo® 3D printers from any PC* on a network.

Designed to optimize workflow, Titanium Assistant can run on a local workstation, offering users remote access to operational alerts and status updates on multiple Neo printers utilized within a facility.

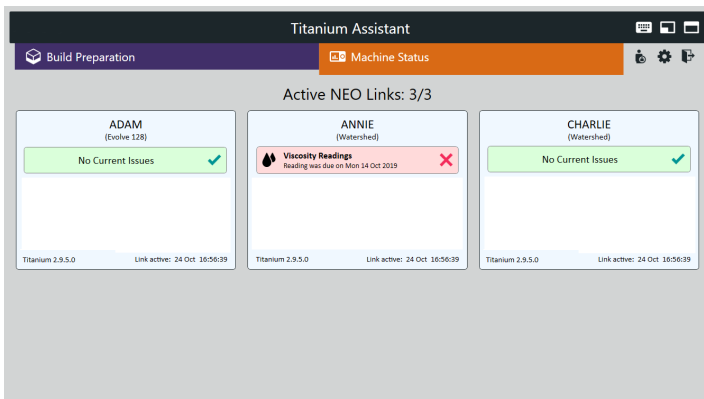


Prepare

Once slice files are available, this function allows the user to alter the parameters of a build remotely.

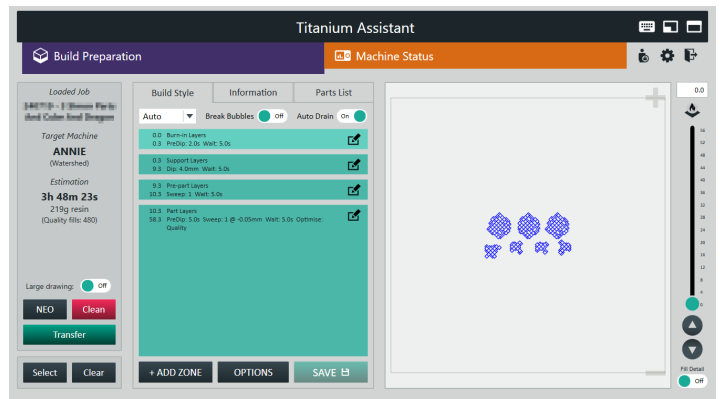


Preview

Titanium Assistant analyzes and validates each build before printing. Users can also preview and check the integrity of the slice file quickly and easily.

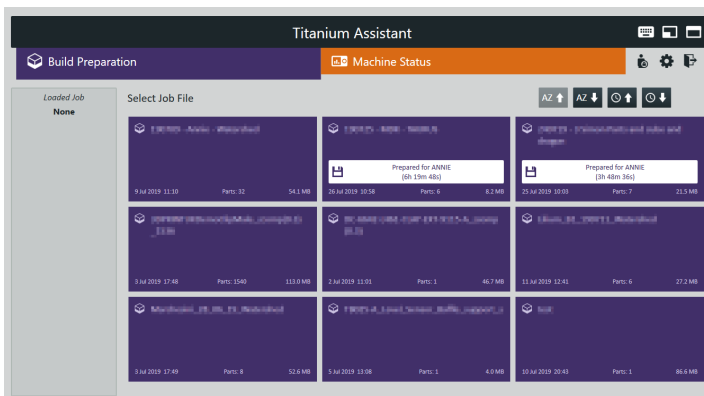

Plan

Obtain independent build time estimates prior to sending files to a Neo. This assists operators with build scheduling and maximizes machine utilization.

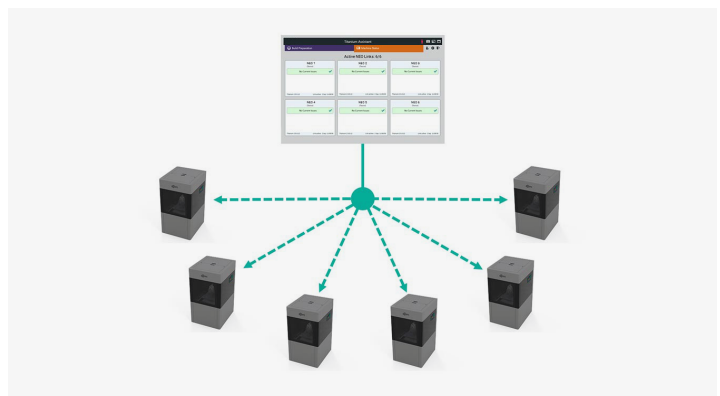

Print

Effortlessly and remotely transfer your build files, with all parameters, to a specific Neo platform. No need to move build files remotely using memory sticks. This increases productivity.

Working with Titanium Assistant

Once the build is prepared by Titanium Assistant, easily transfer the file to a Stratasys Neo 3D printer via local network.**


Stand-alone:

Build files can be loaded and style settings prepared. The prepared build can be transferred manually to the Neo using a USB memory stick.

Connected:

Build files can be loaded and style settings applied using the settings of the target Neo, retrieved via a local network connection. The prepared build can be transferred to the Neo via a network link, or manually using a USB memory stick.***

Multiple Users

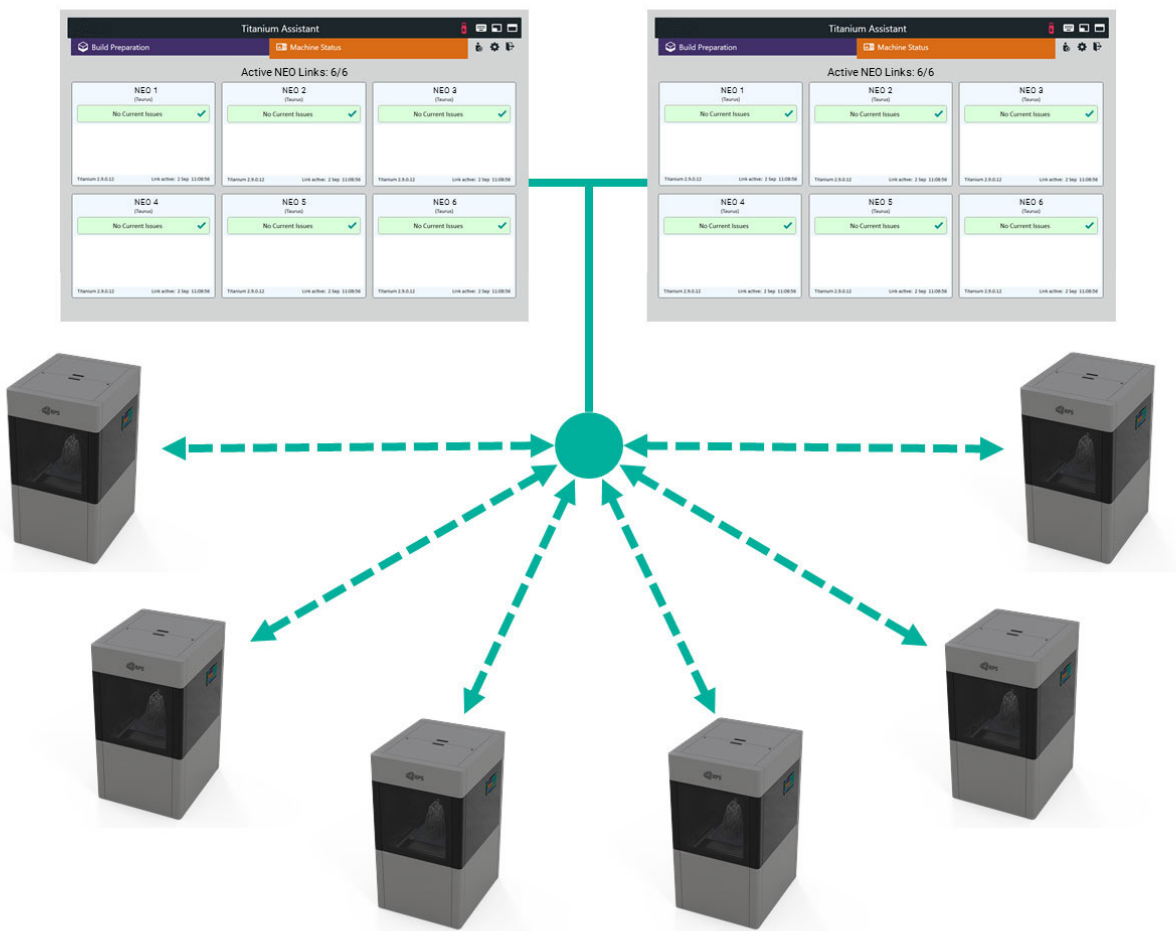

Multiple Neo Systems



* Linked to a Neo 3D printer

** Where a local network is not available, Titanium Assistant can run on a stand - alone basis, transferred via USB stick or similar.

*** To use the connected mode, Titanium Assistant requires that the Titanium data folder of the Neo is shared on the local network and is available to Titanium Assistant as a mapped drive.

Stratasys Headquarters

7665 Commerce Way,
Eden Prairie, MN 55344
+1 800 801 6491 (US Toll Free)
+1 952 937-3000 (Intl)
+1 952 937-0070 (Fax)

1 Holtzman St., Science Park,
PO Box 2496
Rehovot 76124, Israel
+972 74 745 4000
+972 74 745 5000 (Fax)

stratasys.com

ISO 9001:2015 Certified

